


SWS -001/002/003

1. Carefully remove doors
2. Insert solid bottom(s)
3. Insert the two shelf(ves)
4. Insert the top glass
5. Attach locks as per figure 1.
6. Carefully replace doors

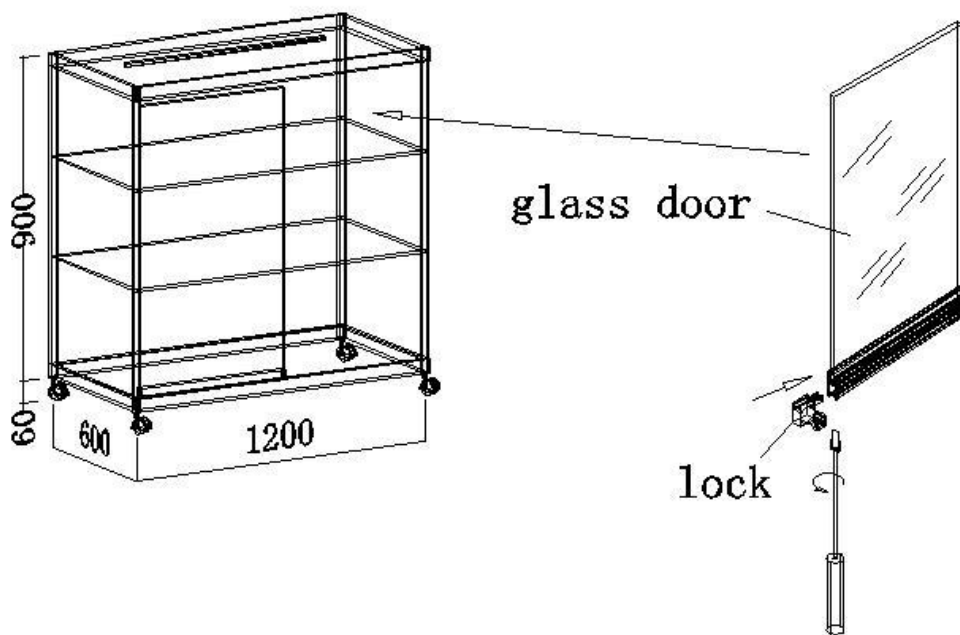

SWS-002C

1. Carefully insert glass shelf (with angles at corners)
2. Insert top glass (has curved cut out corners)

SWS-003C

1. Insert top glass only

SWS-004/G/C

1. Remove sliding doors
2. Insert the three glass shelves
3. Attach locks to the glass door and the cupboard door as shown above for SWS-001/002/003 and replace doors.

SWS-005/006

1. Open hinged door and carefully insert glass shelves
2. Attach lock to glass door remembering to put acrylic pad behind screws next to glass before tightening to avoid damage to the glass.